SIEMENS 1 640



640P01

Desigo RX

Room unit with PPS2 interface

QAX34.3

For use with:

- Equipment from the RXC, RXB, RXL and RXA (PPS2) ranges
- Desigo PX automation stations¹⁾
- Devices with a PPS2 interface
- Measurement of the room temperature
- Bias switch for adjustment of the room temperature setpoint
- Bias switch for selection of the operating mode ([♠]/Auto) and for manual control of the fan in fan-coil systems (up to 3 speeds)
- LCD for display of room temperature and operating mode
- PPS2 interface to the controller
- Tool function for parameter setting and testing ²⁾ of RXB/RXL controllers

Application

As a room unit:

The room unit is used in rooms controlled by an individual room control system, to measure the room temperature and for operation of a room controller. The functions of the LCD display are determined by the controller. If manual fan-speed control is enabled, the room unit can be used to operate a fan-coil system.

It is also suitable for use in conjunction with a Desigo PX automation station 1).

As a tool:

In conjunction with the RXB / RXL controllers (FC-10 and later, CC-02) the QAX34.3 room unit can also be used for parameter-setting and for the wiring test 2 . For details refer to the technical manual, CM110389 (RXB), CM110789 (RXL).

- In the QAX34.3 room unit the address (fixed to 1) cannot be changed.
 If it is used with a PXC... automation station, the display shows the state requested by the user (see page 3), rather than the actual state.
- 2) Wiring test only available with devices from index D (inside the housing, se page 2).

When ordering, please specify the quantity, product name and type code.

Example:

30 Room units QAX34.3

Compatibility

The room unit can be used with all controllers incorporating a PPS2 room unit interface (e.g. Desigo RX and Desigo PX ¹⁾).

1) The QAX34.3 room unit only works with Address 1. If it is used with a PXC... automation station, the display shows the state requested by the user, rather than the actual state.

Mechanical design

The room unit is suitable for mounting on a recessed conduit box. The cable entry is through the rear.

For surface mounting, with the cable entry at the top or bottom, accessory ARG70.2 is required.

Basically the unit comprises the housing and the mounting plate.

These can be locked together and released by a snap-mechanism.

The mounting plate incorporates the screw terminals.

The housing accommodates a printed circuit board, room temperature sensor element, bias switches for setpoint adjustment and selection of the operating mode and fan speed, and the LCD panel.

The housing and mounting plate are plastic.

Opening the housing






Index and manufacturing date



Operator controls and display panel

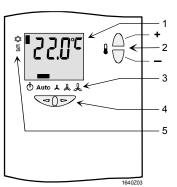

Display of actual room temperature or adjustment value, and bar indicating sequence (heating/cooling), operating mode and fan speed.

Buttons for room temperature and setpoint adjustment

Symbols for operating mode and fan speed

Buttons for operating mode and fan speed Symbols for the sequence (heating/cooling)

Note

The controller determines the actual functions of the buttons and display (based on the selected application and the associated parameters). The following describes all the functions of the elements illustrated.

Button for selecting the operating mode and fan speed This button can be used like an occupancy button to determine the operating mode. Three manual fan speeds can also be defined.

Pressing the left arrow once selects the option one step to the left, and pressing the right arrow once selects the option one step to the right. The currently active operating mode or the manually selected fan speed is indicated by a bar above the relevant symbol.

Button for adjusting the room temperature setpoint

When the button is pressed for the first time, the LCD display switches from room temperature to setpoint display. Each additional operation of the upper or lower button increases or reduces the setpoint by 0.5 K or 1.0 °F (the engineering unit is predetermined by the controller). The maximum possible adjustment range is also defined by the controller.

LCD panel

The following display options are possible in normal operation (actual options determined by the controller).

For details refer to the application description for the controller range concerned.

For information on parameter-setting refer to the technical manual, documents CM110389 (RXB) and CM110789 (RXL).

Room temperature in °C (resolution 0.5 °C)
Room temperature in °F (resolution 1.0 °F)
Setpoint adjustment displayed in digits (Displayed only while adjusting the relative setpoint)
Scale and digits (Displayed only when adjusting the absolute setpoint)
Cooling sequence is active
Heating sequence
(If the bar is not shown against either sequence, then the controller is operating the dead band)
Economy operating mode
Automatic fan control
Comfort operating mode
Automatic fan control
Comfort operating mode
Manual fan control, fan speed 1

The room unit receives its power from the connected controller via the PPS2 interface (low voltage, SELV).

Only one room unit can be connected to an RX... room controller.

When connecting a room unit to a PXC... automation station, the room unit must be Address 1 (this address is permanently programmed in the room unit).

The room unit must be connected to the room controller with a two-core twisted pair cable. See the relevant installation guide (RXC: CA110334; RXB & RXL: CM110381; RXA: CA2Z3884). Unscreened cable may be used.

Mounting instructions

- The device is suitable both for surface mounting and for installation in a recessed conduit box
- The unit should not be mounted in recesses, shelving, behind curtains or doors or above or near direct heat sources
- · Avoid direct sun and draughts
- The conduit must be sealed on the device side, as currents of air in the conduit can affect the sensor reading
- The admissible ambient conditions must be observed.
- · Mounting instructions are enclosed with the device.
- · A set of fixing accessories is enclosed with the device.

Installation

Local installation regulations must be observed.



Warning

The equipment is not protected against accidental connection to AC 230 V.

Commissioning

Start-up characteristics

After an interruption of the connection to the PPS2 interface, communication is only re-established when the connected room controller next polls the PPS2 addresses. The cycle times are as follows:

RXA: 10 seconds; RXB, RXL, and RXC: 3 minutes; PX: 30 seconds

When the supply voltage is connected (via the PPS2 interface) or in the event of a reset via the room controller, the following routine is executed in the room unit:

Step	Function	Description
1	LCD test	All segments of the display module are operated for
		approx. 3 s
2	Identification	Until the controller recognizes the room unit as a PPS2
	by controller	user, the display reads:
3	Ready for	1 s after recognition by the controller, the room unit is
	operation	ready for operation

Displaying the "Wink" function of KNX/EIB and LONWORKS devices

If the room unit is connected to a room controller in the Desigo RXB, RXL or RXC range, the display can be used as an aid to commissioning. If the commissioning tool is used to transmit a Wink command, the room unit displays the type of room controller connected. For example:

Room controller type	Display
RXB 21.1, RXL21,1, RXC21.1,	r. 21
RXC30.1	r. 30

Operating notes

During commissioning and operation, the LCD panel displays error messages:

Display	Description	Type of error
0.5	C: No communication with controller for over 64 s 02: Firmware version (e.g. Version 2.0)	D
E 1	Room temperature sensor outside range 0 40 °C	S
E 15	The room controller has not yet added the room unit to its list of members (during controller start-up)	D
E 17	The room controller does not recognize room unit type	D
0.0	Initial value, after room unit is switched on and before a room controller has sent a value.	S
99.5	Room controller has not transmitted a valid temperature value	S

- S Static error: The error display remains valid until the error has been cleared.
- D Dynamic error: For 5 s after its occurrence, the error is displayed instead of the room temperature. The display then reverts to normal. If the error persists, it can be displayed again by pressing the + or button. Pressing the button again implements a setpoint adjustment.

All other error codes indicate a hardware error.

Disposal



The device is classified as waste electronic equipment in terms of the European Directive 2012/19/EU (WEEE) and should not be disposed of as unsorted municipal waste.

The relevant national legal rules are to be adhered to.


Regarding disposal, use the systems setup for collecting electronic waste.

Observe all local and applicable laws.

Supply voltage	Operating voltage range	DC 12 15 V (SELV	-	
	The device receives its power from the connect		PPS2 interface	
Operating data	Power consumption (from controller) Temperature sensor	Max. 0.10 VA		
Operating data	Measuring element	NTC recistance sens	or	
	•	NTC resistance sensor		
	Measuring range		0 40 °C	
	Response time		≤ 10 min	
	Measuring accuracy (5 30 °C)	± 1.0 K		
	Measuring accuracy (25 °C) Setpoint correction	± 0.5 K		
	Correction range (defined by controller)	Max. ± 10 K (basic s	etting ± 3 K)	
	Accuracy over full correction range	10 %	,	
Display	Type	LCD		
-17	Functions displayed	Room temperature		
		Setpoint adjustment		
		 Operating mode (/ 		
		 Manually selected 	-	
		 Control sequence 	idii opood	
		- Type of error		
		 RXB/RXL paramet 	ar satting	
Ports/interfaces	Type of port between controller and room unit	PPS2 (point-to-point		
F OI (S/III) terraces	Signal voltage, logic 0	< 5 V	interface, v 2)	
	Signal voltage, logic 1	> 7 V		
Cable same ations	Baud rate	4.8 kbps		
Cable connections	Connection terminals (screw terminals)	Solid or stranded cor	nauctors	
	Cinale calle lavath batus as controlles	0.8 2.5 mm ²		
	Single cable length between controller	See installation guide		
	and room unit	Desigo RXC: CA110		
		Desigo RXB & RXL:		
		Desigo RXA: CA2Z3		
		Desigo PX: CA11039		
	Cable type	2-core, twisted pair,	unscreenea	
Protection data	Housing protection	IP 30 to EN 60529		
	Protection class	III to EN 60730-1		
Ambient conditions	IEC 721	Normal operation	Transport	
	Environmental conditions	Class 3K5	Class 2K3	
	Temperature	0 50 °C	– 25 70 °C	
	Humidity	< 85 % rh	< 95 % rh	
	Mechanical conditions	Class 3M2	Class 2M2	
Standards, directives and	Product standard EN 60730-1	Automatic electrical	controls for	
approvals		household and similar use		
	Electromagnetic compatibility (Applications)	For use in residentia	I, commerce, light-	
		industrial and industr	rial environments	
	EU conformity (CE)	CE1T1640xx *)		
	EAC conformity	Eurasia conformity		
Environmental	Product environmental declaration (contains data	CE1E1640 *)		
compatibility	on RoHS compliance, materials composition,	,		
	packaging, environmental benefit, disposal)			
Dimensions	See "Dimensions"			
Color	Front plate	NCS S 0502-G ≈ RA	I 9003 signal white	
JOIOI	Housing base, mounting plate and bias switches	RAL 7035 (light gray	•	
Weight	Excluding packaging	0.119 kg	<i>J</i>	
vveigni	Excluding packaging	U. I I B NY		

^{*)} The documents can be downloaded from http://siemens.com/bt/download.

Terminal layout

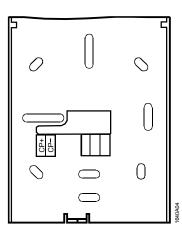


PPS2 interface, power supply

CP+ 1 Device power supply, PPS2 data (positive)
CP- 2 Device power supply, PPS2 data (negative)

Wiring diagram


The example below shows the room unit connected to a Desigo RXB room controller.

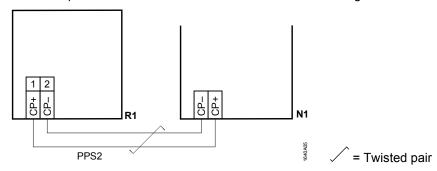



R1 QAX34.3 room unit

N1 RXB... room controller

Dimensions in mm

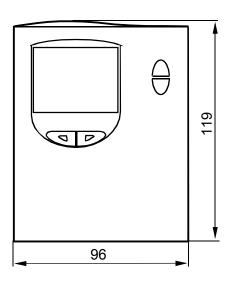



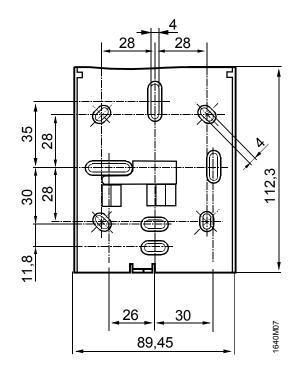

Published by:
Siemens Switzerland Ltd.
Building Technologies Division
International Headquarters
Gubelstrasse 22
6301 Zug
Switzerland
Tel. +41 41-724 24 24
www.siemens.com/buildingtechnologies

© Siemens Switzerland Ltd 2006 Delivery and technical specifications subject to change