



VPP46..



VPI46..



VPP46..Q, with pressure test points P/T    VPI46..Q, with pressure test points P/T



ACVATIX™

## Combi valves, PN 25

**VPP46..****VPP46..Q****VPI46..****VPI46..Q**

for rooms, zones, ventilation and air-conditioning systems

- With integrated differential pressure controller
- DN 10...DN 32: Valve body made of dezincification resistant hot-pressed brass (DZR)
- DN 40...DN 50: Housing made of spheroidal graphite iron
- Volumetric flow 30... 11500 l/h,
- Differential pressure range 15...600 kPa
- Internally threaded Rp conforming to ISO 7-1
- Externally threaded G conforming to ISO 228-1
- Version with pressure test points for  $\Delta p$  measurement (optional)
- Can be equipped with electro thermal or electromotive actuators
  - SSA.. (3-position or DC 0...10 V)
  - STA..3../STP..3.. (2-position or PDM)
  - SUA21/3, SUA21/3P, SUE21P (2-position SPST)
  - STA63../STP63.. (DC 0...10 V)
  - SAY..1P03 (3-position or DC 0...10 V)

### Use

- In ventilation and air conditioning plants for control on the water side and automatic hydraulic balancing of terminal units, such as fan coils, induction units, and in heat exchangers for heating or cooling
- In heating zones like self-contained heating systems, apartments, individual rooms, etc.
- For closed circuits



Product no.	Stock no.	DN	H <sub>100</sub> [mm]	Connections		Test points with pressure test points P/T	v <sub>min</sub> [l/h]	v <sub>100</sub> [l/h]	SAY..P	
				[Inch]					Δp <sub>min</sub> [kPa]	Δp <sub>max</sub> [kPa]
VPI46.40F9.5Q	S55264-V129	40	15	Rp 1½	internally threaded	with pressure test points P/T	1370	9500	25	600
VPI46.50F12Q	S55264-V130	50		Rp 2			1400	11500	36	

DN = nominal size

H<sub>100</sub> = nominal stroke

v<sub>100</sub> = volumetric flow through fully open valve (H<sub>100</sub>)

v<sub>min</sub> = smallest pre-settable volumetric flow through fully open valve (H<sub>100</sub>)

Δp<sub>max</sub> = maximum permissible differential pressure across the valves control path, valid for the entire actuating range of the motorized valve

Δp<sub>min</sub> = minimum differential pressure required across the valve's control path, so that the difference pressure regulator works reliably

## Fittings

Product no.	Stock no.	Description
ALG..2	ALG..2	Set of 2 fittings with threaded connections for 2-port valves, consisting of 2 union nuts, 2 discs and 2 flat seals. ALG..2B are brass fittings, for media temperatures up to 100 °C.
ALG..2B	S55846-Z1..	

## Ordering

### Example

Product no.	Stock no.	Designation
VPP46.15L0.2	S55264-V102	Combi valve, PN 25, externally threaded
SSA61	SSA61	Actuator

Delivery PICV valves, actuators and accessories are packed and supplied separately.

Revision numbers

See page 18

## Equipment combinations DN 15...32

Actuators	Mounting set	Operating voltage	Positioning signal	force	Actuators (no power) <sup>1)</sup>	Spring return	Stroke	Connecting cable	Data sheet
SSA31	-	AC 230 V	3-position	100 N		-	2.5 mm 5 mm	1.5 m	N4893
SSA81		AC 24 V							
SSA61		AC/DC 24 V	DC 0...10 V						
SSA61EP		AC 230 V	2- position		NC	✓	2.5 mm max. 4.5 mm	see data sheet	N4884
STA23..		AC/DC 24V	2-position, PDM						
STA73..		AC 24 V	DC 0...10 V		NO	✓	2.5 mm max. 4.5 mm	see data sheet	N4884
STA63..		AC 230 V	2-position						
STP23.. <sup>2)</sup>		AC/DC 24V	2-position, PDM						
STP73.. <sup>2)</sup>		AC 24 V	DC 0...10 V						
STP63.. <sup>2)</sup>		AC 230V	3-wire on/off (SPST <sup>1)</sup> )	170N		-	2.5 mm 5mm	0.8 m	A6V10446174 A6V11780780 A6V11780777
SUA21/3	AL60	AC230V							
SUA21/3P	-	AC230V							
SUE21P		AC230V							

<sup>1)</sup> NC = Normal Closed = VPP46../VPI46.. powerless closed

NO = Normal Open = VPP46../VPI46.. powerless open

The valve is fully opened without an actuator

<sup>2)</sup> STP..3.. may only be used together with

- VPP46.10L0.2                            - VPI46.15L0.2
- VPP46.15L0.2                            - VPI46.15L0.6
- VPP46.15L0.6                            - VPI46.15L0.2Q

- VPP46.10L0.2Q  
- VPP46.15L0.2Q  
- VPP46.15L0.6Q

- VPI46.15L0.6Q

## Equipment combinations DN 40...50

Type	Article no.	Stroke	Pos. force	Operating voltage	Positioning signal	Spring return	Spring return direction	Pos. time	LED	Manual adjustment	Auxiliary functions
SAY31P03	S55150-A132	15 mm	200 N	AC 230 V	3-position	-	-	30 s	-	Press and fix in place	1)
SAY61P03	S55150-A133			AC/DC 24 V	DC 0...10 V DC 4...20 mA 0...1000 Ω				✓		2), 3)
SAY81P03	S55150-A134				3-position				-		1)

1) Optional accessories: Auxiliary switch ASC10.51

2) Positioning feedback, forced control, characteristic curve changeover


3) Optional accessories: Auxiliary switch ASC10.51, sequence control, control action changeover AZX61.1

## Fittings

Combi valves		Set of fittings		
Externally threaded		Malleable cast iron	Brass	
Product no.	Stock no.	Type / Stock no.	Product no.	Stock no.
VPP46.10L0.2	S55264-V101	-	ALG132 <sup>1)</sup>	BPZ:ALG132
VPP46.10L0.4	S55264-V131	-	ALG132 <sup>1)</sup>	BPZ:ALG132
VPP46.15L0.2	S55264-V102	-	ALG142 <sup>1)</sup>	BPZ:ALG142
VPP46.15L0.6	S55264-V103	-	ALG142 <sup>1)</sup>	BPZ:ALG142
VPP46.20F1.4	S55264-V104	ALG152	ALG152B <sup>2)</sup>	S55846-Z100
VPP46.25F1.8	S55264-V121	ALG202	ALG202B <sup>2)</sup>	S55846-Z102
VPP46.32F4	S55264-V122	ALG252	ALG252B <sup>2)</sup>	S55846-Z104
VPP46.10L0.2Q	S55264-V105	-	ALG132 <sup>1)</sup>	BPZ:ALG132
VPP46.10L0.4Q	S55264-V132	-	ALG132 <sup>1)</sup>	BPZ:ALG132
VPP46.15L0.2Q	S55264-V106	-	ALG142 <sup>1)</sup>	BPZ:ALG142
VPP46.15L0.6Q	S55264-V107	-	ALG142 <sup>1)</sup>	BPZ:ALG142
VPP46.20F1.4Q	S55264-V108	ALG152	ALG152B <sup>2)</sup>	S55846-Z100
VPP46.25F1.8Q	S55264-V123	ALG202	ALG202B <sup>2)</sup>	S55846-Z102
VPP46.32F4Q	S55264-V124	ALG252	ALG252B <sup>2)</sup>	S55846-Z104

1) Connecting thread pipe side: Internally threaded

2) Usable up to maximum medium temperature of 100 °C

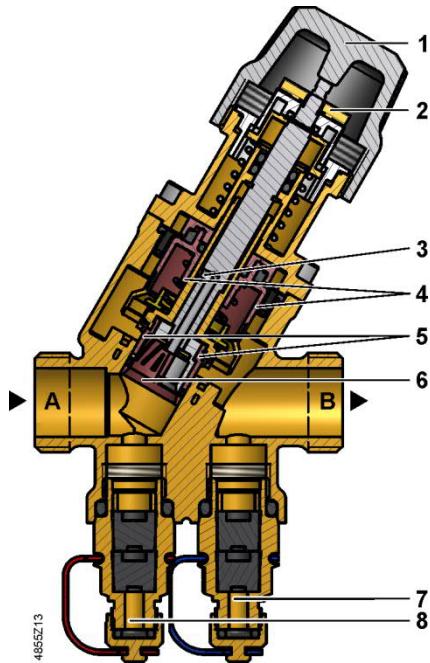


- 1 Manual control knob
- 2 Ring with dial for presetting
- 3 Aperture for differential pressure controller is linked with outlet port B
- 4 Differential pressure controller
- 5 Plug for presetting opening
- 6 Flow control valve
- 7 Pressure test point, blue ribbon, P-
- 8 Pressure test point, red ribbon, P+
- A Inlet port A
- B Outlet port B

Combi valves VP..46..Q (shown here) are additionally equipped with pressure test points P/T.


## Functional principle

The medium entering the valve (inlet port A) passes through the variable presetting opening (5) which is connected to the ring with the dial (2) for presetting the desired maximum volumetric flow. Then, the medium flows through the flow control valve (6) with a linear characteristic and a stroke of 2.5 mm (DN 10...15) respectively 5 mm (DN 20).

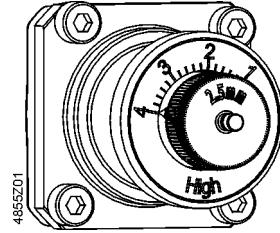

Ring with dial for presetting (2)

The actuator (not shown here) opens and accurately positions the control valve (6). Before leaving the Combi valve, the medium passes through a built-in mechanical differential pressure controller (4). This differential pressure controller is the heart of the Combi valve and ensures that the selected volumetric flow is maintained across the whole working range and independent of the inlet pressure  $p_1$ . The Combi valves VP..46..Q are additionally equipped with two pressure test points ( $P+$ ,  $P-$ ), which allow measurement of the differential pressure across the Combi valve. For that purpose, the electronic manometer ALE10 can be used.

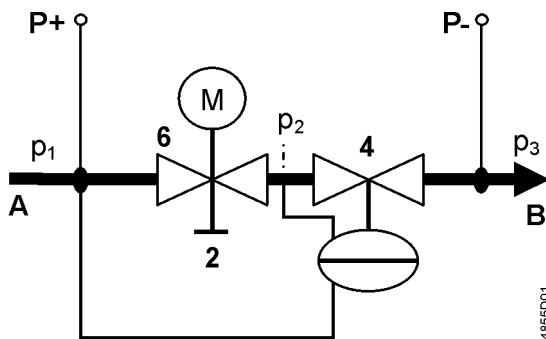

- A Inlet medium (inlet port)
- B Outlet medium (outlet port)
- 2 Ring with dial for presetting
- 4 Differential pressure controller maintains the pressure  $p_1 - p_2$  constant across the flow control valve (6) and the presetting (2)
- 6 Control valve with mounted actuator

$P_-$  = P/T port, pressure test point with blue ribbon (7)

$P_+$  = P/T port, pressure test point with red ribbon (8)


$p_1$  = pressure at inlet of Combi valve

$p_2$  = pressure at outlet of flow control valve

$p_3$  = pressure at outlet of Combi valve

Manual control  
DN 10...32

The manual control knob (1) is ready fitted to protect valve stem and pre-set mechanism and facilitates manual control of the Combi valve during commissioning.

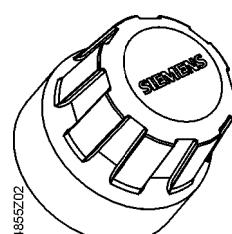

### Factory setting:

The valve is open. To close the valve, turn the manual knob clockwise.

The valve must be open to purge the system.

## Accessories

Product no.	Stock no.		Description
ALE10	ALE10		<p>Electronic manometer <b>excluding</b> measuring lines and measuring tips. Measuring range 0-700 kPa. A differential pressure of more than 1000 kPa will destroy the pressure sensor.</p> <p>For measuring the differential pressure between P+ and P- of the Combi valves (refer to diagram under "Functional principle" on page 3).</p> <p>Functions of the manometer:</p> <ul style="list-style-type: none"> <li>Start/stop</li> <li>Automatic zero position</li> <li>Backlit display</li> <li>Display: Out → outside the measuring range</li> <li>Holding function</li> </ul>
ALE11	ALE11		<p>Measuring lines and straight measuring tips for use with Siemens Combi valves.</p> <p>Equipped with G 1/8" connection with 2 x 40 mm needles.</p>
ALP45	ALP45		<p>Spare nipples P/T port (set of 2)</p> <p>Set contains 1 piece each with a red and blue ribbon.</p> <p>Port: External threads G 1/8" to ISO 228</p> <p>Connection to valve body: G 1/4" to ISO 228, inclusive O-ring</p> <p>Length: 40 mm</p>
ALP46	S55264-V115		<p>Blanking plug for P/T ports</p> <p>Connection to valve body: G 1/4" to ISO 228, inclusive O-ring</p>
ALP47	S55264-V116		<p>Drain ball valve inclusive O-ring</p> <p>Port: External threads G 1/2" to ISO 228</p> <p>Connection to valve body: G 1/4" to ISO 228, inclusive O-ring</p> <p>Length: 48 mm</p>
ALP48	S55264-V117		<p>Combined P/T port and drain ball valve with red ribbon</p> <p>Port: External threads G 1/8" to ISO 228</p> <p>Connection to valve body: G 1/4" to ISO 228, inclusive O-ring</p> <p>Length: 80 mm</p>
ALP49	S55264-V118		<p>Long P/T ports (set of 2 pieces)</p> <p>Set contains 1 piece each with a red and blue ribbon.</p> <p>Port: External threads G 1/8" to ISO 228</p> <p>Connection to valve body: G 1/4" to ISO 228, inclusive O-ring</p> <p>Length: 120 mm</p>
ALP50	S55264-V119		Spare black valve protection cap

## Sizing

---

### Engineering example

#### Basis of calculation

1. Determine energy demand  $Q$  [kW]
2. Determine temperature differential  $\Delta T$  [K]
3. Calculate volumetric flow  
$$\dot{v} = \frac{Q[\text{kW}] \cdot 1000}{1,163 \cdot \Delta T[\text{K}]} \left[ \frac{\text{l}}{\text{h}} \right]$$
4. Select suitable Combi valve
  - pipe connections (internally or externally threaded)
  - with or without P/T ports
5. Determine dial setting using volumetric flow/dial presetting table, see the following page

#### Example

1. Given is a heat exchanger with  $Q = 1.9 \text{ kW}$
2. Temperature differential (supply - return)  $\Delta T = 6 \text{ K}$

#### 3. Volumetric flow

$$\dot{v} = \frac{1,9 \text{ kW} \cdot 1000}{1,163 \cdot 6 \text{ K}} = 272,28 \text{ l/h}$$

Hint: You can also determine the volumetric flow using the valve slide rule.

4. The valve shall have connections with external threads to ISO 228-1 and size DN 15.
5. Combi valve selection:  
Ideally, Combi valves should be selected such that they operate at about 80% of their maximum flow, enabling them to deliver spare capacity, if required.  
VPP46.15L0.6 (externally threaded connections, no pressure test points P/T, nominal volumetric flow 600 l/h)
6. Determine dial setting using volumetric flow/dial presetting table below:  
Volumetric flow 270 l/h  
Dial setting 1.8



## Engineering notes

Valve	Symbols / Direction of flow VP..46..	Symbols / Direction of flow VP..46..Q	Flow in control mode	Valve stem retracts	Valve stem extends
Combi valve VPP46..			variable	closes	opens
Combi valve VPI46..			variable	closes	opens



**The direction of flow indicated (arrow on the valve body) is mandatory!**

The valves should preferably be mounted in the return pipe where temperatures are lower and where the sealing gland is less affected by strain.

### Symbols

Symbol used in catalogs and application descriptions	Symbol used in diagrams
	There are no standard symbols for Combi valves in diagrams.


### Recommendation

A strainer or dirt trap should be fitted upstream of the valve to enhance reliability.  
Remove dirt, welding beads etc. from valves and pipes.  
Do not insulate the actuator bracket, as air circulation must be ensured!

### Mounting notes

Combi valve and actuator can be straightforwardly assembled on site. Special tools or adjustments are not required.  
Prior to mounting the actuator, the required volumetric flow must be set.  
The valve is supplied complete with Mounting Instructions (74 319 0649 0 b).


### Mounting positions

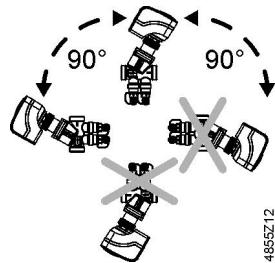

Thermal actuators STA.., STP.. may be installed in any position.  
Actuators SSA.., SAY.. must be installed horizontally up to 90° and not hanging.

### AL60 supporting ring


The AL60 supporting ring must be put into position before mounting the actuator SUA21/3 onto the valve.

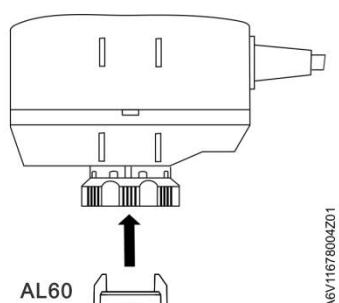

## Installation notes


### Presetting DN 10...32:

1. Remove control knob from Combi valve.

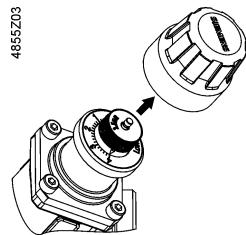


Prior to mounting the actuator, the presetting is to be made as follows:


2. Loosen knurled nut.

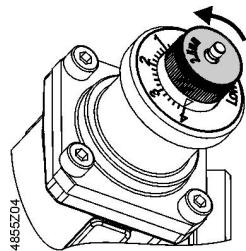

3. Adjust the desired dial setting with the white knob.

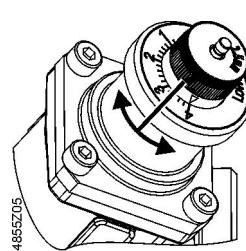


4. Retighten knurled nut by hand.

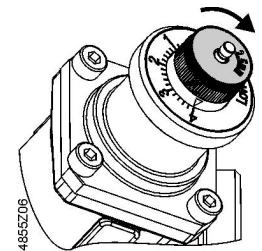


### Presetting DN 40...50:


1. Loosen spindle head

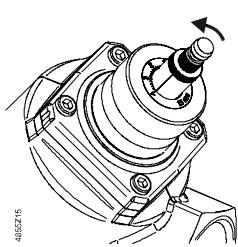


2. Adjust the desired dial setting with the white knob.

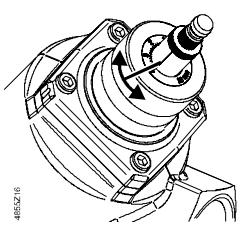

3. Retighten spindle head - by hand only

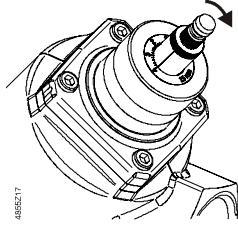

## Valve characteristic VP..46.., VP..46..Q

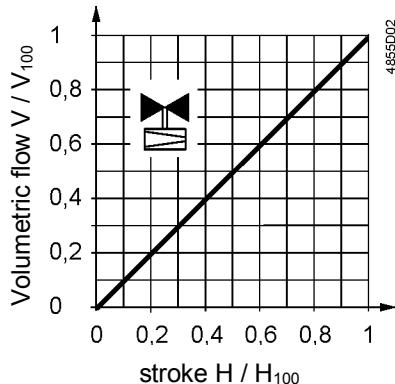

## Commissioning notes



**The valves must be commissioned with the manual control knob or actuator correctly fitted. Strong pressure impacts can damage closed Combi valves.**



**The Combi valves have to be open when flushing or pressure testing the system. Flush only in correct flow direction. Strong pressure impacts can damage closed Combi valves.**



**Differential pressure  $\Delta p_{max}$  across the valve's control path is not allowed to exceed 600 kPa.**

## Manual control

When turning the manual control knob in counter-clockwise direction or manually operating the actuator, the valve opens. The actuator closes the valve. The valves are supplied fully open. The manual knob is not designed for permanent manual operation.

## Maintenance notes

The V..P46.. PICV valves are maintenance-free without cartridge.

Valve plug, stem, presetting, diaphragm etc. may not be disassembled



When performing service work on the valve and / or actuator:

- Switch off the pump and disconnect power supply.
- Close the shut-off valves in the piping network.
- Fully reduce pressure in the piping network and allow the pipes to cool down completely.

Remove the electrical connections only if necessary.

## Sealing gland

The stem sealing gland cannot be exchanged. Should leakage occur, the whole valve must be replaced.

## Disposal

Do not dispose of the device as household waste.

### ⚠ Warning

Due to the tensioned spring return, valve disassembly may result in flying parts causing possible injury.

Only authorized staff may disassemble valves with tensioned spring return!

## Disposal

- Special handling of individual components may be mandated by law or make ecological sense.
- Observe all local and currently applicable laws and regulations.

## Warranty

Application-related technical data are guaranteed only when the valves are used in connection with the Siemens actuators listed under "Equipment combinations" on page 3. When used with actuators of other manufacture, any warranty by Siemens becomes void.

## Technical data

Functional data	PN class	PN 25 as per EN 1333
	Permissible operating pressure	2.500 kPa (25 bar) as per ISO 7628 / EN 1333
	Max. differential pressure	600 kPa
	Min. differential pressure	See tables volumetric flow/dial presetting
Valve characteristic	Valve characteristic	Linear as per VDI/VDE 2173
	Leakage rate in general	Class IV (0...0.01% of volumetric flow $V_{100}$ ) to EN 1349
	DN 25...32 with STA..3..	Class III (0...0.1% of volumetric flow $V_{100}$ ) per EN 1349
	Average flow accuracy	+/-10% from $\Delta P_{min}$ - to $2.5 \times \Delta P_{min}$ +/- 5% from $2.5 \times \Delta P_{min}$ – to 600kPa
	Permissible media	Low-temperature hot water, chilled water, water with antifreeze Recommendation: Water treatment to VDI 2035
	Medium temperature:	
	Valve with actuator	1...120 °C 1...110°C with SUA21/3 <sup>3)</sup> , SUA21/3P, SUE21P
	Permissible ambient temperature	1...50 °C
	Nominal stroke	DN 10L0.2 DN 15L0.2 2.5 mm DN 15L0.6
		DN 10L0.4 / DN 20 5 mm DN 25...32 5.5 mm DN 40...50 15 mm
Materials	Valve body, port, seat, sealing gland and test points	Dezincification resistant hot-pressed brass (DZR), CW602N
	Valve body DN 40...50	Nodular cast iron
	Stem, spring	Stainless steel
	Presetting element	PTFE, PPO, POM C and ABS
	Regulator	PPS
	Seals	EPDM 281 (O-ring)
	Dimensions	Refer to "Dimensions" on page 16
Dimensions / weight	Threaded connections	VPP46.. G to ISO 228-1 (externally threaded) VPI46.. Rp to ISO 7-1 (internally threaded)
	Actuator connection	DN 10...32 M30 x 1.5 mm DN 40...50 Siemens large stroke connector
	Pressure test points (P/T-ports)	G 1/4" (connection valve body) 2 mm x 40 mm (needles)

	Weight	Refer to "Dimensions" on page 16
Standards, directives and approvals	Pressure Equipment Directive Pressure-carrying accessories	PED 2014/68/EU Scope: Article 1, section 1 Definitions: Article 2, section 5
	Fluid group 2 DN 10...40	Without CE-marking as per article 4, section 3 (sound engineering practice) <sup>1)</sup>
	DN 50	Category I, Modul A, with CE-marking as per article 14, section 2
	EU conformity (CE) DN 50	A5W00022837, CE1T4855xx <sup>2)</sup>
	EAC conformity	Eurasia conformity
Environmental compatibility	The product environmental declaration CE1E4855en <sup>2)</sup> contains data on environmentally compatible product design and assessments (RoHS compliance, materials composition, packaging, environmental benefit, disposal).	

<sup>1)</sup> Valves where PS x DN < 1000, do not require special testing and cannot carry the CE label.

<sup>2)</sup> Documents are available at <http://www.siemens.com/bt/download>


<sup>3)</sup> Only with mounting AL60 accessory, the SUA21/3 can drive the VPI46.. or VPP46..valve

## Application examples

Combi valves in HVAC systems combined with variable speed pumps provide even higher energy efficiency. When sizing the pump, it must be made certain that the most critical branch or consumer in the system – usually the remotest from the pump – gets enough pressure (pump head). Thus, it is recommended to use a variable speed pump in constant-pressure mode with end-point feedback, to maintain a minimum differential pressure across the critical valve.

Residential buildings

Residential buildings with for example self-contained flat heating systems:

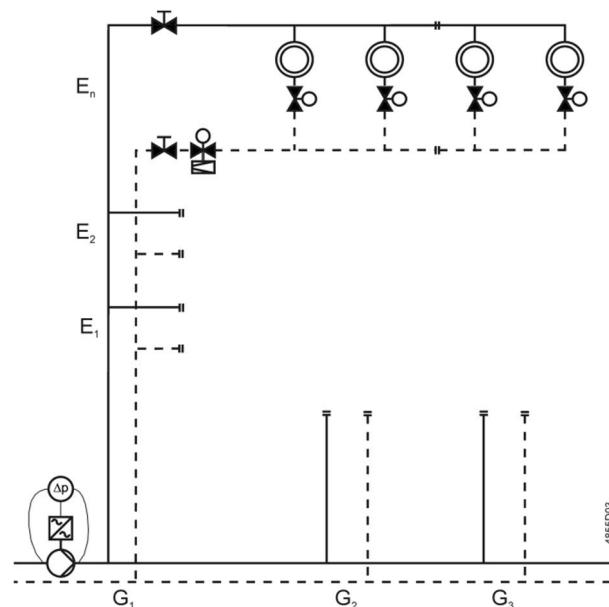


$E$  = Floor

$G$  = Group or zone


Non-residential buildings

Commercial buildings with for example Fan Coil Units or heat exchangers for heating or cooling:

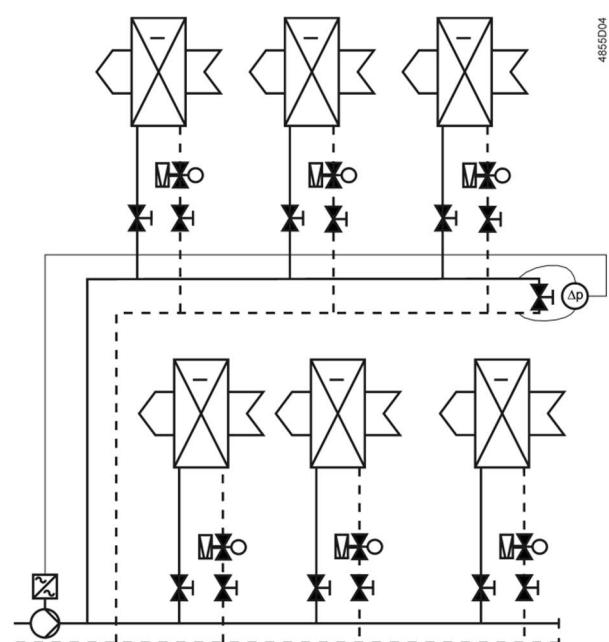


## Dimensions

**VPP46..**

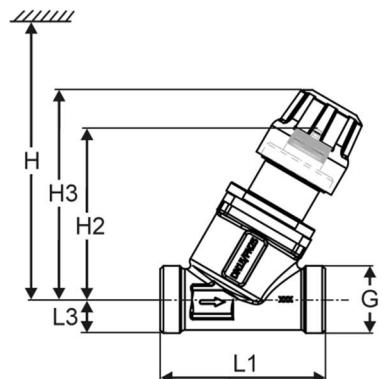

**VPP46..Q**

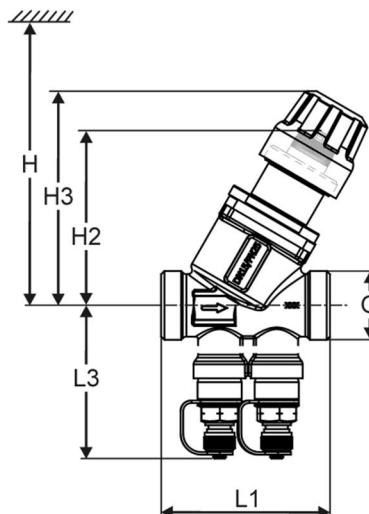

4855M01



4855M02

Valves	DN	G [inch]	L1 [mm]	L3 [mm]	L4 [mm]	H2 [mm]	H3 [mm]	SSA.. [mm]	H <sup>1)</sup> STA..3.. STP..3.. [mm]	Weight [kg]
<b>VPP46.10L0.2</b>	10	1/2		10.5		68.5	83.5			0.314
<b>VPP46.10L0.4</b>				65		67.3	82.2	170	160	0.333
<b>VPP46.15L0.2</b>	15	3/4		13.2		67.5	82.5			0.371
<b>VPP46.15L0.6</b>						70	85			0.497
<b>VPP46.20F1.4</b>	20	1	70	13.6						
<b>VPP46.25F1.8</b>	25	1 1/4	78	22						
<b>VPP46.32F4</b>	32	1 1/2	104	26	63	85	100	185	175	1.22
<b>VPP46.10L0.2Q</b>	10	1/2		54.8		68.5	83.5			0.402
<b>VPP46.10L0.4Q</b>				65		67.3	82.2	170	160	0.302
<b>VPP46.15L0.2Q</b>	15	3/4		55.5		67.5	82.5			0.422
<b>VPP46.15L0.6Q</b>						70	85			0.459
<b>VPP46.20F1.4Q</b>	20	1	70	57.3						
<b>VPP46.25F1.8Q</b>	25	1 1/4	78	59						
<b>VPP46.32F4Q</b>	32	1 1/2	104	68	63	85	100	185	175	1.317

<sup>1)</sup> Total height including actuator


<b>Sets of threaded fittings with flat seal</b>  ALG...2: set of 2 threaded fittings	ALG132 ALG142	pipe side with external R threads	
	ALG152 ALG152B ALG202 ALG202B ALG252 ALG252B	pipe side with internal Rp threads	

Type ALG..		for valve type	DN	G [Inch]	R [Inch]	Rp [Inch]	L [mm]	T [mm]
Malleable cast iron	Brass <sup>1)</sup>							
	<b>ALG132</b>	VPP46.10..	10	G 1/2	R 3/8		≈ 24	≈ 9
	<b>ALG142</b>	VPP46.15..	15	G 3/4	R 1/2		≈ 29.5	≈ 12
<b>ALG152</b>	<b>ALG152B</b>	VPP46.20..	20	G 1		Rp 1/2	≈ 23	≈ 13
<b>ALG202</b>	<b>ALG202B</b>	VPP46.25..	25	G 1 1/4		Rp 3/4		
<b>ALG252</b>	<b>ALG252B</b>	VPP46.32..	32	G 1 1/2		Rp 1		


<sup>1)</sup> Maximum medium temperature 100 °C

- On valve side: cylindrical thread to ISO 228-1, on pipe side: with cylindrical thread to ISO 7-1

**VPI46..**

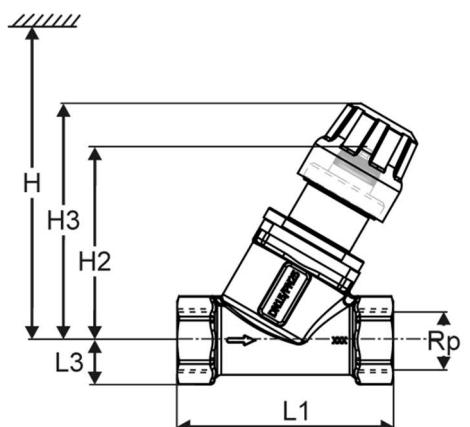

**VPI46..Q**

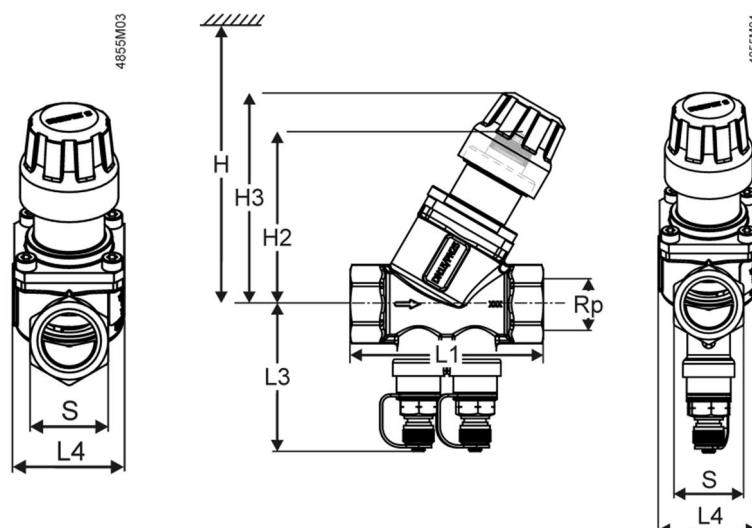

Valves	DN	Rp [inch]	S [mm]	L1 [mm]	L3 [mm]	L4 [mm]	H2 [mm]	H3 [mm]	SSA.. [mm]	STA..3.. [mm]	STP..3.. [mm]	SAY.. [mm]	Weight [kg]
<b>VPI46.15L0.2</b>	15	1/2	27	75	15.2		67.3	82.4					0.377
<b>VPI46.15L0.6</b>							67.5	82.5	170	160			0.418
<b>VPI46.20F1.4</b>	20	3/4	32	79	17.9		70	85					0.533
<b>VPI46.25F1.8</b>	25	1	39	83	22								1.219
<b>VPI46.32F4</b>	32	1 1/4	46	104	26	63	85	100	185	175			
<b>VPI46.15L0.2Q</b>	15	1/2	27	75	60.2		67.3	82.4					0.477
<b>VPI46.15L0.6Q</b>							67.5	82.5	170	160			0.506
<b>VPI46.20F1.4Q</b>	20	3/4	32	79	62.9		70	85					0.625
<b>VPI46.25F1.8Q</b>	25	1	39	83	59								1.316
<b>VPI46.32F4Q</b>	32	1 1/4	46	104	68	63	85	100	185	175			3.253
<b>VPI46.40F9.5Q</b>	40	1 1/2	56		71		90	161	-	-	-	500	3.683
<b>VPI46.50F12Q</b>	50	2	70		138		77						

<sup>1)</sup> Total height including actuator

## Revision Numbers

Product number	Valid from rev. no.	Product number	Valid from rev. no.
VPP46.10L0.2	..A	VPP46.10L0.2Q	..A
VPP46.10L0.4	..B	VPP46.10L0.4Q	..B
VPP46.15L0.2	..A	VPP46.15L0.2Q	..A
VPP46.15L0.6	..A	VPP46.15L0.6Q	..A
VPP46.20F1.4	..A	VPP46.20F1.4Q	..A
VPP46.25F1.8	..A	VPP46.25F1.8Q	..A
VPP46.32F4	..A	VPP46.32F4Q	..A
VPI46.15L0.2	..A	VPI46.15L0.2Q	..A
VPI46.15L0.6	..A	VPI46.15L0.6Q	..A
VPI46.20F1.4	..A	VPI46.20F1.4Q	..A
VPI46.25F1.8	..A	VPI46.25F1.8Q	..A
VPI46.32F4	..A	VPI46.32F4Q	..A
		VPI46.40F9.5Q	..A
		VPI46.50F12Q	..A

## Documentation form

Installed location	Valve type	Actuator Type	Valve Size	Planned Pre-setting	Required $\Delta p_{min}$ (kPa)	Verified $\Delta p$ (kPa)	Flow <sup>1</sup> (l/h)

<sup>1)</sup> Flow = if Verified  $\Delta p_{min} >$  Required  $\Delta p_{min}$ , then Flow is as per presetting in datasheet, otherwise check.

Issued by  
Siemens Switzerland Ltd  
Smart Infrastructure  
International Headquarters  
Theilerstrasse 1a  
6300 Zug  
Switzerland  
Tel. +41 58-724 24 24  
[www.siemens.com/buildingtechnologies](http://www.siemens.com/buildingtechnologies)

© Siemens Switzerland Ltd, 2019  
Technical specifications and availability subject to change without notice.